




- 1** Plug in the UV light to make sure it works properly.

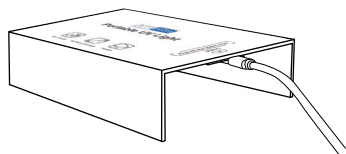


- 2** Turn off your device and apply the leveling pads to the back of your phone. Clean the screen with the wet wipes and cleaning cloth.

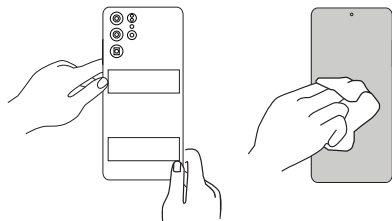


- 3** Use the Screen-Prep cloth to wipe the surface of the screen a few times. Then use the cleaning cloth to clean the screen again. This will help to prevent bubbles during application.

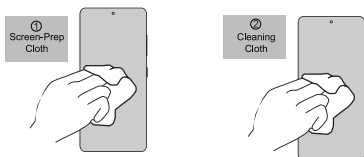


- 4** Place the application tray on your phone. Make sure to align the side labelled "TOP" with the top of the phone. Press firmly into place. Then insert the pin on the application tray.

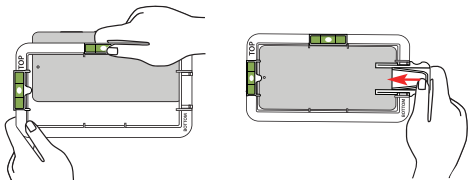


- 5** Adjust the application tray to make sure the 2 bubbles are in the center of each bubble level.

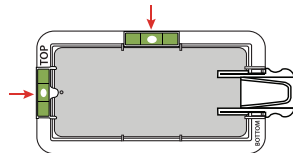


- 6** The application tray will be pre-installed with absorption pads to soak up any excess adhesive. Please make sure they are securely installed on either side of the tray. Re-clean your screen using dust removal stickers if needed.

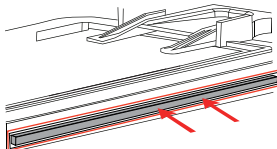

- 7** Unscrew the RED cap of the first adhesive tube. Hold the tube over one of the circle as indicated below. Unscrewing the black cap will release the adhesive in the tube.

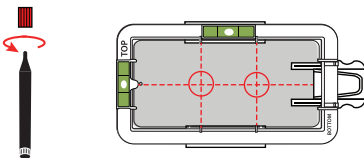

- 8** Drip all the adhesive onto the left side of the screen. Repeat step 7 with the second adhesive tube. Apply the adhesive to the right side of the phone screen, aligning the tube with the pegs.

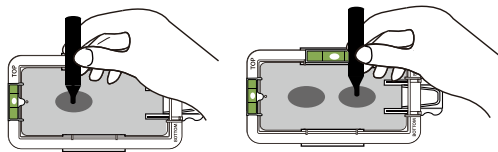


- 9** Peel off the mask film of the screen protector, and set it within the tray, resting one end on your phone screen and the other end on the pin. Make sure the camera cutout is aligned with the top of the phone, where the device's front-facing camera is located.




The protector should be suspended above the adhesive, resting on the pin.


- 10** **SLOWLY** pull the pin outward to allow the protector to lower onto the adhesive. Once the protector touches BOTH adhesive puddles, pull the pin out the rest of the way.

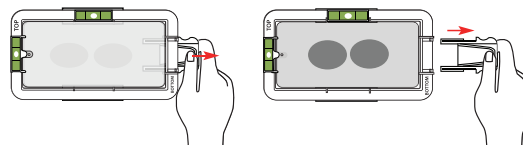


- 11** The adhesive will begin spreading on its own. While it is spreading, place the metal cylinder on the fingerprint scanner sticker.

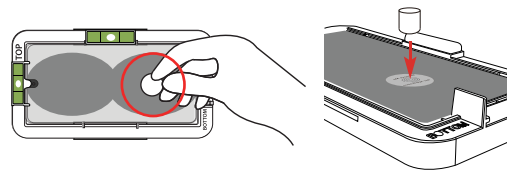


- 12** Wait for the adhesive to fully spread to all edges of the phone. DO NOT TOUCH the screen protector during this time.

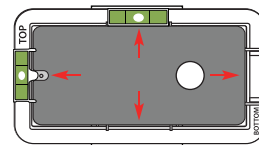


- 13** Plug in the UV light with your USB-C cable. Place the UV light over the tray and device. Cure for about 15 seconds.

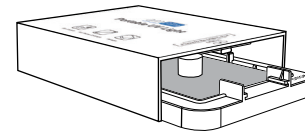


- 14** Remove the installation tray, metal cylinder and scanner sticker. Make note of STEP 15 below, as the timing for step 15 is important.

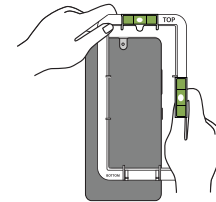

- 15** Use the UV light again to cure about 75 seconds after step 14 is completed.

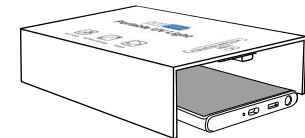

- 16** Rescan your fingerprints into the phone system if needed, and enjoy the screen protector!

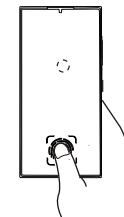

Q & A

Q: I got an air bubble during installation. What now?

A: If the Screen Protector is already on the phone with the adhesive spread, you will need a replacement Protector. Cure the Protector with the UV light, then remove it and discard. Please send us an email for a free replacement.

Q: The Gel didn't spread evenly during application, and it's been more than 3 minutes. What do I do?

A: Tilt the phone in the direction that the Gel needs to go. DO NOT TOUCH THE PROTECTOR.

Q: How do I reset my fingerprint after installing the screen protector?

A: Navigate: Settings > Lock screen > Looking for something else? > Fingerprints > Add Fingerprint

Q: How do I remove the Screen Protector?

A: Once the UV gel is cured, it becomes a solid adhesive gel. You can peel the screen protector off, starting with one corner and carefully lifting up.

Q: The adhesive came out of the tube, but a small amount splashed into its own puddle.

A: Tilt the phone so the larger pool will absorb the smaller one, and then tilt so the adhesive will return to center. Or, use the adhesive tube to drag the small puddle into the larger one.



24/7 Customer Support

 support@techmatte.com

www.techmatte.com

STAY CONNECTED



Installation Guide

Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to TechMatte.com/WarrantyClaim

OR

Scan the QR Code Below.



Want More Coverage?

Unlock our Lifetime Warranty

Go to TechMatte.com/Register

OR



ULTRA

Watch Demo



www.TechMatte.com/install/UV5