amFilm®

Installation Guide
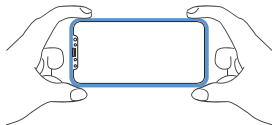
Scan Me

or visit

www.TechMatte.com/install/GLS04

**1** Begin by cleaning the screen with the Wet Wipes and the Microfiber Cleaning Cloth.
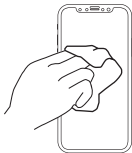
2 Remove any case from the phone. Place the Easy Installation Tray on the phone.

**3** Peel off the first mask film from the Screen Protector, exposing the adhesive surface.

4 Using the Easy Installation Tray as a guide, line up the top of the protector with the top of the Installation Tray. Slowly place the protector onto the phone.
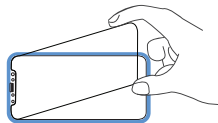
5 Using your index finger, swipe down the middle of the screen protector so that the protector will adhere itself to your phone.

6 Remove the Installation Tray, and squeeze out any bubbles from under the screen protector. Press around the edges to ensure the protector is sealed.
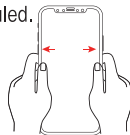
Damaged or Arrived Broken?

Try our 1-Click Warranty Claim

Go to TechMatte.com/WarrantyClaim

OR

Scan the QR Code Below.

100% SATISFACTION GUARANTEE

We REPLACE ✓
We REFUND ✓
We EXCHANGE ✓

Want More Coverage?

Unlock our Lifetime Warranty

Go to TechMatte.com/Register

OR

Scan the QR Code Below.

TECHmatte

24/7 Customer Support

support@techmatte.com

www.techmatte.com

STAY CONNECTED

@TechMatte | @TechMatte | /TechMatte